

# Electric Kettle

## User Manual

EN



**SENCOR®**

SWK 2080BK-NAB1

Before using this appliance, read the user manual thoroughly, even if you are already familiar with operating similar types of appliances. Use the appliance only in the manner described in this user manual. Keep this user manual in a safe place where it can be easily accessed for future use.

We recommend saving the original cardboard shipping box, packaging material, receipt and vendor responsibility statement or warranty card for the duration of warranty. When shipping, pack the appliance using the original packaging materials only.

EN-1

## TABLE OF CONTENTS

IMPORTANT SAFEGUARDS .....	3
DESCRIPTION OF THE KETTLE .....	7
BEFORE FIRST USE .....	8
USING THE KETTLE .....	8
CARING FOR YOUR WATER KETTLE .....	9
TECHNICAL SPECIFICATIONS .....	9

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use handle.
3. To protect against fire, electric shock and injury to persons, DO NOT IMMERSE CORD, plug or base unit in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before assembling or disassembling parts and before cleaning appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner.

7. The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let power cord touch hot surfaces or hang over edge of table or counter where it can be pulled on by children or tripped over unintentionally.
10. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
11. Always attach appliance to its base unit first, then plug cord into wall outlet. To disconnect, push "Off" button, then remove plug from wall outlet.
12. Do not fill this appliance with any liquids other than water.
13. Do not use this appliance for any purpose other than its intended use.
14. Scalding may occur if the lid is opened during the heating cycle.

15. HOUSEHOLD USE ONLY

16. SAVE THESE INSTRUCTIONS

## **CAUTION!**

The Water Kettle is intended to heat water only. It is not designed to be used for cooking food or for heating any other liquids. Do not fill the kettle with any liquids other than water.

## CONSUMER SAFETY INFORMATION THIS UNIT IS FOR HOUSEHOLD USE ONLY.

### Grounding Plug

This appliance has a 3-prong grounding plug to reduce the risk of electric shock. This plug will fit into an outlet only one way. If the plug does not fit into an available outlet, contact a qualified electrician.

Do not modify the plug in any way. If an extension cord is used, it should be a 3-wire grounding cord.



### CAUTION


**Short cord Instructions:** This appliance is equipped with a short power supply cord as a safety precaution to prevent personal injury or property damage resulting from pulling, tripping or becoming entangled with a longer cord. Do not allow children to use or be near this appliance without close adult supervision. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

# Electric Kettle

SWK 2080BK-NAB1

EN

## DESCRIPTION OF THE KETTLE

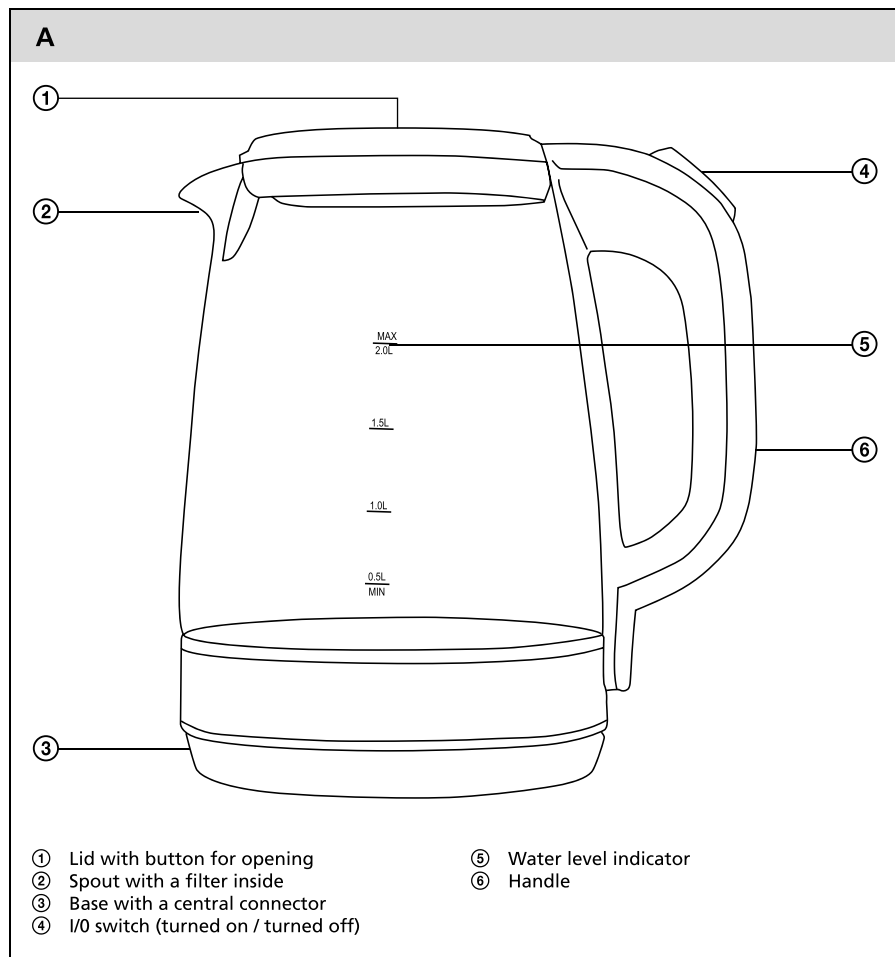

# Electric Kettle

SWK 2080BK-NAB1

## BEFORE FIRST USE

1. Remove all packaging from the kettle and its base.
2. Fill the kettle with clean water up to the maximum water mark. Boil the water and empty the contents of the kettle. Repeat this process two to three times.



**Note:**

To boil water in the kettle, follow the instructions in the chapter "Using the kettle".

3. Now the electric kettle is ready to use.

## USING THE KETTLE

1. Set the power cord to the desired length. Push the power cord into the groove in the base. Put the base on a stable, even, clean surface.
2. Fill the kettle with the required amount of water. The water level must reach at least the minimum mark – 16.9 fl. oz. (0.5 l) but not exceed the maximum mark – 67.6 fl. oz. (2.0 l). You can fill the kettle through the spout or through the opening when the lid is lifted. To open the lid, press the button located in the middle of the lid. After filling the kettle with water, close the lid and push it down so that it is secured in the closed position.



**Warning!**

Never fill the kettle when it is on the base.

If the electric kettle is overfilled, boiling water may splash out.

3. Put the kettle on the base. Insert the power plug into an electrical socket. Check that the kettle's lid is closed.
4. Start the kettle by moving the switch to position I (ON). The kettle will light up.



**Attention:**

Do not turn on the kettle if it is empty. Improper use of the kettle may shorten its useful life. If you accidentally turn on the electric kettle without water, after it reaches a certain temperature, the thermostat will, interrupt the electric circuit and the kettle will shut off. The kettle can be used again after several minutes, as soon as its stainless-steel bottom has cooled down.

5. When the water starts to boil, the kettle will turn off automatically and the kettle light will turn off. Before taking the kettle off the base, check that it has turned off automatically. If it has not automatically turned off, turn off the kettle manually by moving the switch to position 0 (OFF).



**Note:**

The kettle's operation can be stopped at any time by moving the switch to position 0 (OFF).

6. Pour the boiled water into a prepared container, cup or mug. Make sure that it remains in a horizontal position when it is carried, particularly if it is filled all the way up to the maximum mark. If you wish to open the lid to refill the kettle, first empty all the contents of the kettle so that you are not scalded by the escaping steam.
7. After you finish using the kettle, unplug it. Empty the kettle and allow it to cool down.



# Electric Kettle

SWK 2080BK-NAB1

EN

## CARING FOR YOUR WATER KETTLE

### To Clean Water Kettle

1. Always unplug the appliance before cleaning.
2. Do not immerse in water or rinse kettle surface with water.
3. To clean base, simply wipe with a damp cloth. Do not use abrasive detergents. Never rinse or immerse the base in water. If the base has surface stains or spots, use a stainless steel cleaning agent.

### To Clean Water Filter

1. Grasp filter and lift out.
2. Rinse under running water.
3. Place back in the kettle in its original position.

### To Decalcify Kettle Interior

Decalcifying is recommended regularly, depending on water hardness in your area.

1. Fill the kettle with water and decalcifier, according to decalcifier product instructions.
2. Do not boil, as solution may foam over.
3. When finished, rinse kettle thoroughly with fresh water.

## TECHNICAL SPECIFICATIONS

Rated voltage .....	120 V ~
Rated frequency .....	60 Hz
Rated power input .....	1500 W
Capacity .....	67.6 fl. oz. (8.45 cups) (2 l)

We reserve the right to change text and technical specifications.

# Electric Kettle

SWK 2080BK-NAB1