

# Electric Kettle

## User Manual

EN



## SENCOR®

SWK 1770GG-NAB1 / SWK 1771GR-NAB1  
SWK 1772BL-NAB1 / SWK 1773VT-NAB1  
SWK 1774RD-NAB1 / SWK 1775RS-NAB1  
SWK 1776GD-NAB1 / SWK 1777CH-NAB1  
SWK 1778BK-NAB1

Before using this appliance, please read the user manual thoroughly, even if you are already familiar with using similar types of appliances. Use the appliance only as described in the user manual. Keep the user manual in a safe place where it will always be ready for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt, vendor's responsibility statement and warranty card for at least the duration of the warranty. If the appliance is transported, we recommend packaging it in its original materials.

# Electric Kettle

SWK 1770GG-NAB1 / SWK 1771GR-NAB1 / SWK 1772BL-NAB1 / SWK 1773VT-NAB1 / SWK 1774RD-NAB1  
SWK 1775RS-NAB1 / SWK 1776GD-NAB1 / SWK 1777CH-NAB1 / SWK 1778BK-NAB1

## TABLE OF CONTENTS

IMPORTANT SAFEGUARDS .....	3
CONSUMER SAFETY INFORMATION .....	4
THIS UNIT IS FOR HOUSEHOLD USE ONLY.....	4
DESCRIPTION OF THE ELECTRIC KETTLE .....	5
BEFORE FIRST USE OF THE ELECTRIC KETTLE .....	6
USING THE ELECTRIC KETTLE .....	6
CARING FOR YOUR WATER KETTLE .....	6
TECHNICAL SPECIFICATIONS .....	7

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be always followed, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use handle.
3. To protect against fire, electric shock and injury to persons, DO NOT IMMERSER CORD, plug or base unit in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before assembling or disassembling parts and before cleaning appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner.
7. The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let power cord touch hot surfaces or hang over edge of table or counter where it can be pulled on by children or tripped over unintentionally.
10. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
11. Always attach appliance to its base unit first, then plug cord into wall outlet. To disconnect, push "Off" button, then remove plug from wall outlet.
12. Do not fill this appliance with any liquids other than water.
13. Do not use this appliance for any purpose other than its intended use.
14. Scalding may occur if the lid is opened during the heating cycle.
15. HOUSEHOLD USE ONLY
16. SAVE THESE INSTRUCTIONS

# Electric Kettle

SWK 1770GG-NAB1 / SWK 1771GR-NAB1 / SWK 1772BL-NAB1 / SWK 1773VT-NAB1 / SWK 1774RD-NAB1  
SWK 1775RS-NAB1 / SWK 1776GD-NAB1 / SWK 1777CH-NAB1 / SWK 1778BK-NAB1

## CAUTION!

The Water Kettle is intended to heat water only. It is not designed to be used for cooking food or for heating any other liquids. Do not fill the kettle with any liquids other than water.

## CONSUMER SAFETY INFORMATION

### THIS UNIT IS FOR HOUSEHOLD USE ONLY.

#### Grounding Plug

This appliance has a 3-prong grounding plug to reduce the risk of electric shock. This plug will fit into an outlet only one way. If the plug does not fit into an available outlet, contact a qualified electrician.

Do not modify the plug in any way. If an extension cord is used, it should be a 3-wire grounding cord.



#### CAUTION


Short cord Instructions: This appliance is equipped with a short power supply cord as a safety precaution to prevent personal injury or property damage resulting from pulling, tripping or becoming entangled with a longer cord. Do not allow children to use or be near this appliance without close adult supervision. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

# Electric Kettle

SWK 1770GG-NAB1 / SWK 1771GR-NAB1 / SWK 1772BL-NAB1 / SWK 1773VT-NAB1 / SWK 1774RD-NAB1  
SWK 1775RS-NAB1 / SWK 1776GD-NAB1 / SWK 1777CH-NAB1 / SWK 1778BK-NAB1

EN

## DESCRIPTION OF THE ELECTRIC KETTLE

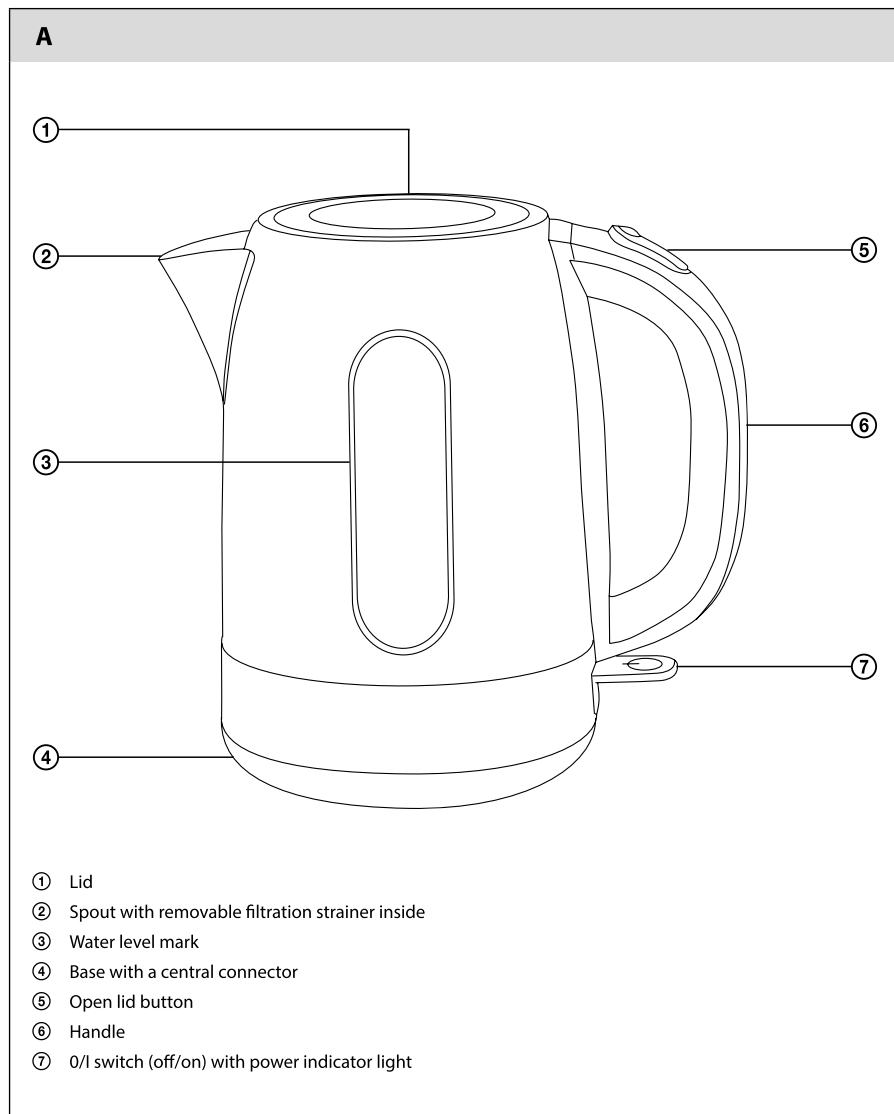

# Electric Kettle

SWK 1770GG-NAB1 / SWK 1771GR-NAB1 / SWK 1772BL-NAB1 / SWK 1773VT-NAB1 / SWK 1774RD-NAB1  
SWK 1775RS-NAB1 / SWK 1776GD-NAB1 / SWK 1777CH-NAB1 / SWK 1778BK-NAB1

## BEFORE FIRST USE OF THE ELECTRIC KETTLE

1. Remove all wrapping material from the kettle and its power base A④. Discard any plastic bags to eliminate the suffocation hazard to young children.
2. Fill the kettle with cold water up to the maximum water level mark A③ (57fl.oz / 7 cups / 1.7L). Boil the water and discard it. Repeat this process 2 to 3 times.

**Note:**

To boil water in the fast boil kettle, proceed according to the instructions in the chapter Using the fast boil kettle.

3. Now the kettle is ready for operation.

## USING THE ELECTRIC KETTLE

1. Set the power cord to the desired length. Push the power cord into the groove in the power base A④. Place the power base A④ on a clean, stable, even surface.
2. Fill the kettle with the amount of cold water needed. The kettle must be filled with at least 17fl.oz / 2 cups / 0.5L of fresh water and must not be filled above the maximum water level mark A③ (57fl.oz / 7 cups / 1.7L) on the steam tube inside the kettle. You may fill the kettle through the spout A② or through the opening after lifting the lid A①. After filling the kettle with water, close the lid A①. Make sure the lid A① is closed firmly.

**Warning!**

Do not fill the kettle while it is on the power base A④.

If the kettle is overfilled, boiling water may splash and scalding may occur.

3. Place the kettle on the power base A④. Plug the kettle in. Check that the lid A① is closed firmly.
4. Start the kettle by moving power switch A⑦ to "ON".

**Attention:**

Do not turn the kettle on if it is empty. Using the kettle incorrectly may shorten its service life. If you accidentally turn the kettle on with insufficient water or no water, the thermostat will interrupt the electrical circuit when a certain temperature is reached. The kettle can be used again after several minutes, as soon as its stainless-steel bottom has cooled down.

5. As soon as water boils, the kettle turns off automatically. Before taking the kettle off the power base A④, make sure it has automatically turned itself off. If the kettle has not turned itself off automatically, turn it off manually by moving the power switch A⑦ to "OFF".

**Note:**

Kettle operation can be stopped at any time by turning the power switch "OFF" A⑦.

6. Pour the boiling water into a prepared container, cup or mug. Be sure to carry the kettle upright, especially when it is filled to the maximum mark.  
If you wish to open the lid A① to refill the kettle, first empty the kettle completely, so that you are not scalded by escaping steam.
7. After you finish using the kettle, unplug it from the electrical socket. Empty the kettle and allow it to cool down.

## CARING FOR YOUR WATER KETTLE

### To Clean Water Kettle

1. Always unplug the appliance before cleaning.
2. Do not immerse in water or rinse kettle surface with water.
3. To clean base, simply wipe with a damp cloth. Do not use abrasive detergents. Never rinse or immerse the base in water. If the base has surface stains or spots, use a stainless steel cleaning agent.

# Electric Kettle

SWK 1770GG-NAB1 / SWK 1771GR-NAB1 / SWK 1772BL-NAB1 / SWK 1773VT-NAB1 / SWK 1774RD-NAB1  
SWK 1775RS-NAB1 / SWK 1776GD-NAB1 / SWK 1777CH-NAB1 / SWK 1778BK-NAB1

EN

## To Clean Water Filter

1. Grasp filter and lift out.
2. Rinse under running water.
3. Place back in the kettle in its original position.

## To Decalcify Kettle Interior

Decalcifying is recommended regularly, depending on water hardness in your area.

1. Fill the kettle with water and decalcifier, according to decalcifier product instructions.
2. Do not boil, as solution may foam over.
3. When finished, rinse kettle thoroughly with fresh water.

## TECHNICAL SPECIFICATIONS

Nominal voltage .....	120V
Nominal frequency .....	60Hz
Rated power input .....	1500W
Capacity .....	57 fl.oz / 7 cups / 1.7L

We reserve the right to change text and technical specifications.